

RIB OWNER'S MANUAL

(Sport Series ... 3.3m to 3.9m)

To be read by all operators of this craft.



Small Boats - Big Adventures

Thank you for buying a Terminator Boat. Used and maintained properly, we are confident that you will find this boat to be both safe and reliable. We trust that you will enjoy many years of great service from this product.

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY

WARNING - never use compressed air or dive tanks to inflate your boat.

Valves...

Check that the valve stems are out for inflation (push in and turn through $\frac{1}{4}$ turn anti-clockwise). To deflate, push the valve in and lock open by turning clockwise through 90° . Always be very careful with the valves and make sure that no sand or debris gets into the valve area.

To Inflate...

Starting at the rear, insert the foot pump tube into the valve and inflate each compartment in turn to about $\frac{2}{3}$ pressure. Now go back & fully inflate all the compartments. This 2 stage process is very important as it will prevent over-inflation and damage to the internal baffles.

The pontoons are full when the pump is hard to stand on and when you can press your fist into the pontoon with only slight depression. This is around 0.25 bar/ 3.5psi. Always fully inflate the boat before use and never operate with low tube pressure as this may result in damage.

Hot sun will increase the air pressure...

Boats inflated on a cold day may become over-inflated on a hot sunny day. Always release some pressure on hot days if the boat is not in the water and only ever cover the boat with a light coloured cover.

Storage...

Using a cover will not only help to keep your boat clean, it will also greatly extend the life of your boat. Prior to storing we recommend that you clean and dry the boat, as well as releasing some air from the tubes.

Hull cavity...

There is a cavity between the fibreglass floor and hull, with a bung at the stern. This should be undone to drain any water when the boat is brought out of the water.

Correct Outboard Selection...

Your Terminator Boat has been built to safely handle up to a specific engine size. There is a serial plate on the inside of the transom displaying the maximum horse power. Never exceed this engine size. Exceeding this hp will void any warranty.

Oars...

It is recommended that you stow the oars when not in use to avoid loss or damage.

Safety...

Ensure that everyone on board is wearing a correctly fitted life jacket and that you comply with local marine regulations.

Children should be supervised by an adult at all times.

Always carry some form of emergency communication & an emergency repair kit.

Never use the alloy seat as a grab handle in case it comes loose and you or your passengers could go overboard.

Do not exceed the maximum allowed persons on board.

Regularly check your boating equipment for any signs of damage or wear and tear. A well maintained boat is a safe boat.

Boat Lifting & Towing Eyes...

Before lifting the boat from the water or towing, remove all items and never allow anyone to ride in or on the boat.

Trailer Set Up...

Your trailer must be set up correctly. A poorly set up trailer can damage the hull. Make sure that the boat is securely tied down before towing and do not stow heavy items in the boat while towing.

Hull damage from trailers is not covered under warranty.

Care & Maintenance...

Take care when beaching to avoid damage to the hull and always use wheels where fitted.

Don't stand in your boat on a hard surface as damage may occur.

For cleaning use only a mild detergent diluted with water. Use very dilute Jiff or similar sparingly for stubborn marks. Never use petrol or thinners.

If petrol spills occur, quickly wash with warm water and detergent.

WARRANTY

In addition to any rights which the purchaser may have under relevant consumer protection legislation, your Terminator Boat is sold with the following limited warranty.

Warranty Details	Recreational Use	Commercial Use
Tube fabric against deterioration of material resulting in blistering, cracks or porosity affecting use of boat	5 years	1 year
Structural integrity of material seams affecting use of boat	5 years	1 year
Material & workmanship of rigid hull affecting use of boat	2 years	1 year
Material & workmanship of all attachments including oars, oarlocks, valves, ropes, handles, logo, seats, rubbing strips, towing eyes, boat cover (if purchased) and pump.	1 year	1 year


General Conditions of Warranty...

1. This warranty does not cover normal wear and tear, accident, neglect, misuse, trailering, storage, ripping, tearing, abrasion, gelcoat flex cracks, staining of materials, mildew, stress to seams from heat expansion or over-inflation, damage caused by use while under-inflated, fuel spills, solvents or prolonged exposure to UV.
2. Items covered by this warranty will be repaired or replaced free of charge at the discretion of Terminator Boats.
3. Please note that no freight costs are covered under this warranty.
4. Customers must provide the original receipt as proof of purchase.
5. Terminator Boats Ltd shall in no event be liable for death, injuries to person or property for incidental, contingent, special or consequential damages for the use of any Terminator inflatable boat.

Wishing you many years of safe & happy
boating from the Terminator Team!

www.terminatorboats.co.nz

sales@terminatorboats.co.nz

 09 447 1709

Rosedale, North Shore City